

---

# Preface

Thank you for purchasing an Axis CD-ROM server. This product is developed to make the information stored on CD-ROM available to all users on an Ethernet or Token Ring network.

## About Axis

Axis Communications is dedicated to provide inventive solutions for network connection of computer peripherals. Since the start in 1984, it has been one of the fastest growing companies in the market. The headquarters are located in Lund, Sweden, with subsidiaries in Boston, Tokyo, and Hong Kong.

Axis Communications has a distributor network operating in more than 60 countries world-wide, marketing three product lines:

**Network CD-ROM Servers** - AXIS 850/950 and AXIS 851/951 Multi-protocol CD-ROM servers provide a flexible and cost-efficient solution for sharing CD-ROMs across the network. They are available in Ethernet and Token Ring versions, with or without built-in drive option.

**Network Print Servers** - These intelligent Ethernet and Token Ring print servers support a wide range of LAN protocols. The AXIS NPS 530, 532, 550 and AXIS 150, 152, 540, 542, 560, 570 are Ethernet print servers, while the AXIS NPS 630, 632, 650 and AXIS 640, 642, 660, 670 are Token Ring print servers.

**IBM Mainframe and S/3x – AS/400 Printer Interfaces** - These products include a wide range of plug-in interfaces and stand-alone products such as the AXIS Cobra+, AXIS 330/370 Cobra, AXIS HP MIO, the AXIS AFP IPDS-to-PostScript converter, and the AXIS AFP MIO/IOP IPDS-to-PCL converters.

## About this Manual

This manual applies to the AXIS 850, 851, 950 and 951 CD-ROM servers with firmware release 2.10 and to subsequent releases until otherwise notified.

**The manual consists of five sections and additional appendices:**

- 1. Introduction** – The Axis CD-ROM Servers, how they work, where to use them and their main features.
- 2. Basic Installation** – How to connect your CD-ROM Server to the network and how to connect additional CD-ROM drives to your server.



- 3. Network Configuration** – How to integrate the CD-ROM server in your network environment.
- 4. Using the Axis CD-ROM server** – How to access CD-ROM data.
- 5. Access Control and Set-up** – How to configure the CD-ROM server.

Every care has been taken in the preparation of this manual; if you detect any inaccuracies or omissions, please inform us at the address on the back cover. Axis Communications AB cannot be held responsible for any technical or typographical errors and reserves the right to make changes in this manual and to the product without prior notice.

## **Electromagnetic Compatibility (EMC) Notices**

### **USA**

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference. Shielded cables should be used with this unit to ensure compliance with the Class A limits.

### **Europe**




This digital equipment fulfils the requirements for radiated emission according to limit B of EN55022/1987, and the requirements for immunity according to EN50082-1/1992 residential, commercial, and light industry. (Compliance is not valid for unshielded network and printer cables.)

## **Trademark Acknowledgements**

IBM, AIX, OS/2, OS/2 Warp, Novell, NetWare, Netscape, Apple, Macintosh, LAN Server, LAN Manager, DOS, Microsoft, Windows, Windows for Workgroups, Windows NT and Windows 95 are registered trademarks of the respective holders.

Axis CD-ROM Server User's Manual  
Part No: 14081  
Copyright © Axis Communications AB, 1996

 Revision 2.0  
Dated: May 1996



# Table of Contents

 
Section 1	Introduction .....	5
	The Axis CD-ROM Servers .....	5
	How it Works .....	6
	Where to Use it .....	6
Section 2	Basic Installation .....	7
	Unpacking .....	7
	Installing the Internal CD-ROM Drive (AXIS 851 and AXIS 951) .....	9
	Connecting CD-ROM Drives to the Axis CD-ROM Server .....	10
	SCSI Devices and Termination .....	12
	Connecting the Axis CD-ROM Server to the Network .....	14
	Compatible CD-ROM drives .....	15
Section 3	Network Configuration .....	17
	Novell NetWare .....	17
	Microsoft and IBM Network Operating Systems .....	17
	UNIX Systems .....	17
	Source Routing (Token Ring only): .....	22
Section 4	Using the Axis CD-ROM Server .....	23
	The CD-ROM server File System .....	23
	Accessing CD-ROMs .....	25
	Novell NetWare (IPX) .....	26
	Microsoft and IBM Network Operating Systems (SMB) .....	33
	UNIX (NFS) .....	44
Section 5	Access Control and Set-up .....	45
	CD-ROM Access Control .....	45
	CD-ROM Server Set-up .....	51
Appendix A	Trouble-shooting .....	55
	The Front Panel Indicators .....	55
	Errors When Accessing the CD-ROM Server .....	56
	CD-ROM Software Will Not Run .....	56
	Restoring Factory Default Settings .....	57



## Table of Contents

---

Appendix B	The Config File .....	59
Appendix C	Updating the Software .....	61
Appendix D	Technical Specifications .....	63
Appendix E	How To Contact Axis .....	65
	Index .....	67



## Section I Introduction

### The Axis CD-ROM Servers

The AXIS 850, 851, 950 and 951 CD-ROM servers connect CD-ROM drives to Ethernet or Token Ring networks. All users on the network can share the information of any CD-ROM inserted into a connected drive.

The Axis CD-ROM Servers have the following characteristics:

- **Ease of use:** The CD-ROM server is designed to be as easy as possible to install and use. It uses NCP, SMB and NFS, so there is no need to learn to use any special software to access the server. No disks or tapes are needed to install the server.
- **Speed:** The throughput is exceeding 500kbytes/s – ample speed for demanding CD-ROM applications.
- **Flexibility:** It simultaneously supports Novell NetWare, Microsoft and IBM Network Operating systems as well as UNIX. Each CD-ROM Server connects up to seven CD-ROM drives or jukeboxes, or a CD-ROM tower with up to 7 drives.
- **Security:** It is possible to restrict the access to any CD-ROM by listing the users that are allowed to access it or by setting up password protection. It is also possible to limit the number of simultaneous users of any CD-ROM to comply with license agreements.
- **Network management:** The CD-ROM Server supports the Simple Network Management Protocol, SNMP. This allows remote management and trouble-shooting of the server. A standard SNMP agent resides on the server. It collects network statistics and error messages to aid in trouble-shooting.



### How it Works

The Axis CD-ROM server is connected as a node in an Ethernet network, or as a station in a Token Ring network. In the network it acts as a file server. To your computer the Axis CD-ROM Server appears as any other file server and it is accessed using the standard commands used in your network operating system.

### Where to Use it

The Axis CD-ROM servers can be used simultaneously from Windows, OS/2, DOS and UNIX systems. They support IPX/NCP, SMB over NetBIOS/NetBEUI, SMB over NetBIOS/TCP/IP and NFS.

In the NetWare  
Environment


The Axis CD-ROM server emulates a Novell File Server running NetWare 3.x.

With the Microsoft and  
IBM network operating  
systems

The CD-ROM server is easily accessed using the SMB protocol.

In the UNIX  
environment

The CD-ROM server is mounted using NFS.

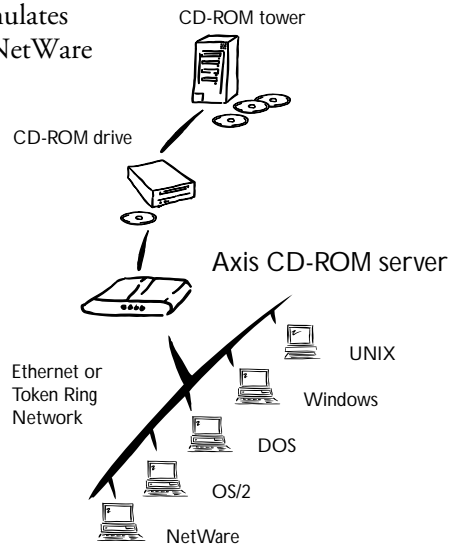




## Section 2 Basic Installation


### Unpacking

Unpack and inspect all parts for damage. Contact your dealer if anything is missing. All packaging materials are recyclable.
 
#### The standard delivery contains the following:




 - ☐ AXIS 850 CD-ROM Server (Part no: 0048-1) **or**  
AXIS 851 CD-ROM Server (Part no: 0049-1) **or**  
AXIS 950 CD-ROM Server (Part no: 0050-1) **or**  
AXIS 951 CD-ROM Server (Part no: 0051-1)
- ☐ AXIS 850/950 User's Manual (Part no: 14081)
- ☐ AXIS 850/950 Quick Installation Guide (Part no: 14082)
- ☐ Warranty registration form
- ☐ Four screws (AXIS 851 and AXIS 951 only)
- ☐ Power supply:



Part no:	AXIS 850 (PS-D)	AXIS 851/951 (PS-C)	AXIS 950 (PS-B)
Europe	14233	14235	13267
UK	14234	14236	13268
Australia	14255	14258	13269
USA	14253	14256	13270
Japan	14254	14257	13936

#### Optional accessories:

 


- ☐ SCSI-2 to 50 pin Centronics-style cable (Part no: 14259)




- ☐ SCSI-2 to SCSI-2 cable (Part no: 14260)



## Section 2: Basic Installation

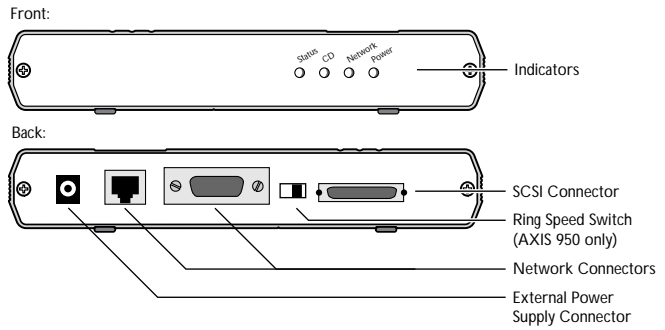

The AXIS 850/950 CD-ROM server

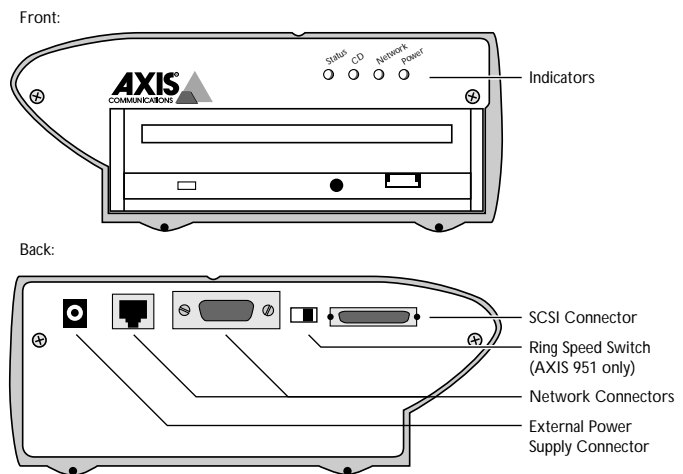

The AXIS 851/951 CD-ROM server






## Installing the Internal CD-ROM Drive (AXIS 851 and AXIS 951)

The AXIS 851 and AXIS 951 CD-ROM servers are delivered without CD-ROM drives. If a drive is not already installed by your distributor, any standard SCSI CD-ROM drive can be installed using the following steps:

### Before you begin:

- Make sure that the power supply is marked with the correct mains voltage.
  - Make sure the power is not connected to the CD-ROM server.
- 1. Set the SCSI address of the CD-ROM drive you are installing.** SCSI addresses 0 through 6 may be used. We suggest using SCSI address 0 for the internal drive. See the CD-ROM drive documentation for instructions on how to set the address.
  - 2. Activate the CD-ROM drive SCSI termination.** See also “SCSI Devices and Termination” on page 12. For instructions, see the CD-ROM drive documentation.
  - 3. Connect the SCSI cable and the power cable from the Axis CD-ROM server to the CD-ROM drive.**
  - 4. Slide the CD-ROM drive into the CD-ROM server cabinet.** See figure below.

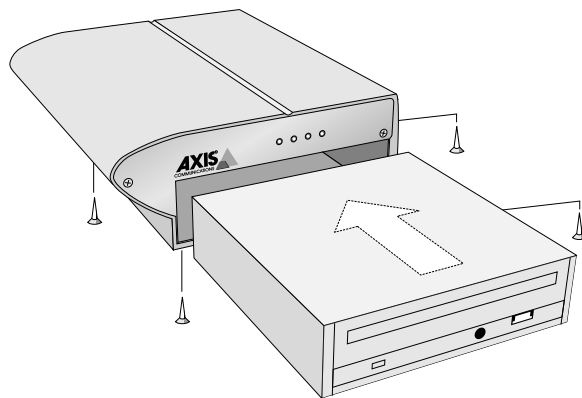

- 5. Fix the drive from underneath with the four screws supplied.**



- 6. Connect power to the Axis CD-ROM server.** The CD-ROM server indicators will flash during power-on and self-test. When the STATUS indicator stops flashing and remains unlit, the CD-ROM server is ready for use.

If you intend to connect more CD-ROM drives to the Axis 851 or 951 CD-ROM server, the internal SCSI termination of the CD-ROM server has to be turned off. To do this, the CD-ROM server has to be connected to the network and configured. Proceed with “Connecting the Axis CD-ROM Server to the Network” on page 14 and then with sections 3, 4 and 5. After turning internal SCSI termination off according to the instructions in section 5, return to “Connecting CD-ROM drives to the Axis CD-ROM Server” below.

### Connecting CD-ROM Drives to the Axis CD-ROM Server

Up to seven SCSI CD-ROM drives can be serviced by a single Axis CD-ROM Server. The drives are connected using the appropriate SCSI cable, which must be ordered separately.

#### Before you begin

- Make sure that the power supply is marked with the correct mains voltage.
  - Always make sure the power is not connected to the CD-ROM server or any of the CD-ROM drives when making changes to the SCSI chain.
  - If you are using an AXIS 851 or AXIS 951 CD-ROM server with an internal drive, make sure the internal termination is off. See section 5.
- 1. Connect the SCSI cable to the external connector on the CD-ROM server.**
  - 2. Connect the SCSI cable to the external drive.**

 


3. **Set the SCSI address of the external drive.** Each connected drive must have a unique SCSI address. SCSI addresses 0 through 6 may be used. For Axis 851 and Axis 951 we recommend SCSI address 0 for the internal drive. See the CD-ROM drive documentation for instructions on how to set the address.
4. **Connect a SCSI terminator to the last drive in the SCSI chain.** All other external CD-ROM drives must not be terminated. See also “SCSI Devices and Termination” on page 12. For instructions, see the CD-ROM drive documentation.
5. **Connect power to all external CD-ROM drives and switch them on.**
6. **Connect power to the Axis CD-ROM Server.** The CD-ROM server indicators will flash during power-on and self-test. When the STATUS indicator stops flashing and remains unlit, the CD-ROM server is ready for use.




## SCSI Devices and Termination

### *AXIS 851 or AXIS 951 with internal drive only*



Drive terminated,  
Axis CD-ROM server  
termination on.

### *AXIS 851 or AXIS 951 with external CD-ROM drives connected*

 


Drive terminated,  
Axis CD-ROM server  
termination off.

Not terminated

Not terminated

Last drive terminated

### *AXIS 850 or AXIS 950 with one or more external CD-ROM drives*

 

Axis CD-ROM server  
termination on.

Not terminated

Not terminated

Last drive terminated

#### CD-ROM server termination set-up

The SCSI bus allows seven CD-ROM drives to be connected to the CD-ROM server. Each unit on the SCSI bus must have a unique SCSI address. SCSI addresses 0 through 6 can be used for the CD-ROM drives connected to the CD-ROM server.

#### Termination

In order for the SCSI bus to work properly, it has to be electrically terminated at both ends. This is usually done by attaching a terminator plug to the last unit in the SCSI chain. Modern SCSI drives may have built-in termination, which is activated or deactivated using a switch on the back panel. Check the documentation for your CD-ROM drive to see how to terminate the drive properly.



The Axis CD-ROM Servers have built-in termination. When using the Axis 851 and Axis 951 CD-ROM Servers with external CD-ROM drives, the internal termination has to be turned off, and the last drive of the SCSI chain terminated. See also the illustrations above. For instructions how to turn on or off the built-in termination, see section 5.



## Connecting the Axis CD-ROM Server to the Network

### Before you begin

- Make sure that your network is ready to accept a new node.
- Any network configuration should always involve the Network Administrator.

### Ethernet

The AXIS 850 and AXIS 851 CD-ROM Servers have AUI and 10baseT connectors. 10base2, 10base5 or optical fibre connectivity is achieved by using an external transceiver.

### Token Ring

The Axis 950 and Axis 951 CD-ROM Servers have connectors for STP (Media Type 1) and UTP (Media Type 3).

To connect the Axis CD-ROM Server to your network follow these steps:

1. **Disconnect the CD-ROM server power supply to turn the server off.**
2. **Record the CD-ROM server serial number.** You will need this number during the network configuration. The number is found on the label on the back of the server.
3. **If you have a Token Ring network, set the Ring Speed Switch on the back panel of your AXIS 950 or AXIS 951 CD-ROM Server to the ring speed of your network (4 or 16 Mb/s).**

### **Caution** ⚠

- ☐ Do NOT change the Ring Speed Switch setting when the power is on or the CD-ROM server is connected to the network.

4. **Connect the network cable to the appropriate connector.**
5. **Connect power to the Axis CD-ROM Server.**

The installation is now completed. Proceed with the configuration according to sections 3, 4 and 5.



## Compatible CD-ROM drives

The CD-ROM server can be used with standard SCSI CD-ROM drives with 1x, 2x, 3x, 4x, 6x and 8x speed. It can be used with towers and also with jukeboxes with LUN based addressing. The CD-ROM server cannot be used with CD-R writers.

Compatible CD-ROM drives include:

- Sony 55s 2x, Sony 76s 4x
- NEC 3x, NEC CDR601 4x, NEC CDR222 4x
- Panasonic CR-504B 4x
- Toshiba XM 5301 4x
- Plextor Px43cs 4x, Plextor Px63cs 6x

Compatible CD-jukeboxes include:

- Pioneer DRM 604X (6 discs)
- Pioneer DRM 624X (6 discs)
- NEC 2X CL (7 discs)



This page is intentionally blank





## Section 3 Network Configuration

### Novell NetWare

The Axis CD-ROM server emulates a NetWare 3.x file server. You do not need to make any NetWare configuration to start working with your CD-ROM server.

### Microsoft and IBM Network Operating Systems

The Axis CD-ROM server does not need any configuration to be operational when using Microsoft and IBM network operating systems such as Windows for Workgroups, Windows 95, Windows NT or OS/2.

### UNIX Systems

To use the Axis CD-ROM server in the TCP/IP environment you have to find an available Internet address and make up a unique host name for it. For Token Ring CD-ROM servers, the source routing mode may have to be set up.

#### Before you begin

- You will need *root* privileges on the system.
- Have the serial number found on the back of the CD-ROM server available.
- Make sure the CD-ROM server is powered on and attached to the network.
- Any network configuration should always involve the Network Administrator.



### Assign an Internet Address and a Host Name

---

To establish communication with the TCP/IP network, an Internet address and a host name must be assigned to the CD-ROM server and included in your system host table. The Internet address must also be downloaded to the CD-ROM server.

1. **Find an available Internet address and make up a unique host name for your Axis CD-ROM server.** The host name you choose will be used when mounting the CD-ROM server for NFS use.
2. **Add the Internet address and host name to your system host table (/etc/hosts on most UNIX systems) by appending the following line:**

<code>&lt;Internet address&gt;</code>	<code>&lt;host name&gt;</code>
---------------------------------------	--------------------------------

#### Example:

<code>192.36.253.96</code>	<code>cdserv</code>
----------------------------	---------------------

#### Caution

DO NOT use the default or the above Internet address when installing your Axis CD-ROM server. Always consult your network administrator before assigning an Internet address.

3. **Update your Alias Name data bases** If your system utilizes alias name data bases such as Yellow Pages (YP) or Network Information Services (NIS), you should update these. On most systems this is done by entering the following commands:

 
<pre>cd /var/yp make</pre>
----------------------------

### Send the Internet Address to the CD-ROM Server

---

You can send the Internet address to the Axis CD-ROM server in three ways, the *arp*, the *rarp* or the *bootp* method. The main characteristics for each method are:

- **arp** – the easiest method. Requires that the Internet address is downloaded to each new device individually.



- **rarp** – downloads the Internet address to each device automatically. Requires a *rarp* daemon on your system and operates within a single network segment only,
- **bootp** – similar to rarp, but operates on the entire network. Requires a *bootp* daemon on your system.

Choose the method most suited to your needs. If needed, the *rarp* and *bootp* methods can be disabled by editing the `RARPEnable` and `BOOTPEnable` parameters as described in section 5.

### Set the Internet Address Using the arp Method

Perform the following commands to down-load the Internet address and verify the communication (the *Ethernet address* or *node address* equals the serial number found at the back of the Axis CD-ROM server with each pair of digits separated by a colon, see example below):

```
arp -s <host name> <Ethernet or node address> temp  
ping <host name>
```

#### Example:

```
arp -s cdserv 00:40:8c:11:00:86 temp  
ping cdserv
```

The host will return '*cdserv is alive*' or similar indicating that the address has been set, and that communication is established.

- Notes:**
- ❑ The `arp -s` command may vary between different systems. Some BSD-type systems expect the host name and Ethernet address in reverse order. IBM AIX systems require the additional argument `ether` for Ethernet networks (e.g. `arp -s ether salesdept 00:40:8c:11:00:86 temp`) and `802.5` for Token Ring networks (e.g. `arp -s 802.5 salesdept 00:40:8c:11:00:86 temp`).
  - ❑ When you execute the ping command for the first time you should expect a response time significantly longer than usual.



### Set the Internet Address Using the rarp Method

---

Follow these steps to use the rarp method.

1. **Append the following line to your Ethernet address or Node address table (typically /etc/ethers):**

<Ethernet or node address>	<host name>
----------------------------	-------------

#### Example

00:40:8c:11:00:86	cdserv
-------------------	--------

2. **Update your host table and alias name data bases as described above.**
3. **Start the rarp daemon (if not already running), typically by the command: `rarpd -a`**
4. **Restart the Axis CD-ROM Server to download the Internet address.**

### Setting the Internet Address Using the bootp Method

---

Follow these steps to use the bootp method:

1. **Append the following entry to your boot table (typically /etc/bootptab):**

<code>&lt;host name&gt;:ht=&lt;hardware type&gt;:vm=&lt;vendor magic&gt;:\ :ha=&lt;hardware address&gt;:ip=&lt;Internet address&gt;:\ :sm=&lt;subnet mask&gt;:gw=&lt;gateway field&gt;</code>
---

#### Example (Ethernet):

<code>cdserv:ht=ether:vm=rfc1048:\ :ha=00408c110086:ip=192.36.253.96:\ :sm=255.255.255.0:gw=192.36.253.254</code>
---

#### Example (Token Ring):

<code>cdserv:ht=tr:vm=rfc1048:\ :ha=00408c110086:ip=192.36.253.96:\ :sm=255.255.255.0:gw=192.36.253.254</code>
--



2. **Update your host table and alias name data bases as described above.**
3. **Start the bootp daemon (if not already running), typically by the command: `bootpd -a`**
4. **Restart the Axis CD-ROM Server to download the Internet address, default router address, and net mask.**

- Notes:**
- ☐ The `ht` and `vm` fields must be entered exactly as in the example. For Ethernet `ht=ether` and for Token Ring `ht=tr`.
  - ☐ The `ha` and `ip` fields are the Ethernet or node address and Internet address respectively. **DO NOT** use the addresses from the example. Use the Ethernet or node address equal to the serial number of your Axis CD-ROM Server and the Internet address previously assigned to it.
  - ☐ The `sm` and `gw` fields correspond to the net mask and default router address parameters. See “CD-ROM Server Set-up” on page 51.



### Source Routing (Token Ring only):

You may need to set up the source routing mode of your AXIS 950 or AXIS 951 CD-ROM server when using it in a Token Ring network with bridges. There are four modes available:

- **Off** – no source routing information. This is useful in strictly ‘transparent bridge’ environments, or when using old equipment that does not support source routing.
- **Single** – single route broadcast mode. This is useful when there are no ‘transparent bridges’, and a spanning tree protocol is successfully used by the Token Ring bridges.
- **All** – all routes broadcast mode. Use this mode when the spanning tree offers a nonsatisfactory route, or when a spanning tree is not constructed.
- **Auto** – cycle Off-Single-All modes. This is the default setting and is useful in most environments. However, under certain circumstances (such as extremely heavy network load, network source routing policies, etc.) you might need to switch to one of the above settings.

The source routing mode is set by editing the CD-ROM server `SourceRouting` parameter. See section 5, “Advanced functions” for instructions.

The Axis CD-ROM server is now ready to be accessed using NFS. Proceed with section 4, “Using the Axis CD-ROM Server”.



## Section 4 Using the Axis CD-ROM Server


This section shows how to access the CD-ROM drives connected to the server from all the supported operating system environments:

- Novell NetWare
- Microsoft and IBM Network Operating Systems
- UNIX

**Note:** ☐ The proper network clients and transport protocols must be running on your computer. Please refer to your Network Operating System manuals for instructions.

### The CD-ROM server File System

The CD-ROM server will appear to your system as a file server. Like any other file server it has a directory structure where files are stored. The Axis CD-ROM server directory structure is outlined below:

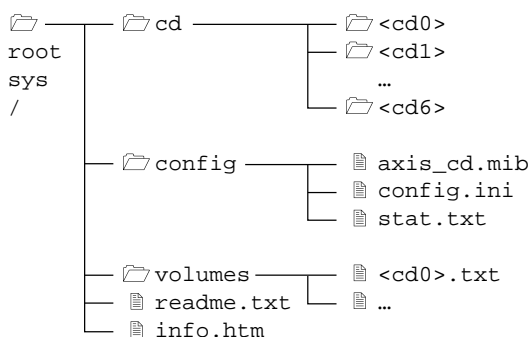

When you insert a CD-ROM into a connected drive, a folder for that CD-ROM is created in the *cd* folder on the server. All the files on the CD-ROM are accessed through this folder.

If the CD-ROM you insert has a volume name, it will be used to name the folder, otherwise the folder will be named *cd\_nnnnn*, where *nnnnn* is a unique five digit number.



## Section 4: Using the Axis CD-ROM Server

---

At the same time as the folder for your CD-ROM is created, a text file with the same name is created in the *volumes* folder. This file controls the user access to the CD-ROM. In section 5, “Advanced Functions” we will learn more about CD-ROM server access control.

The *readme.txt* file is an ASCII text file containing last minute information about the CD-ROM server.

The *info.htm* file contains more CD-ROM server info and a link to the Axis WWW Home Page. Use your WWW navigator software (*e.g.* Netscape Navigator) to view this file.

The *config* folder contains various CD-ROM server configuration files. The *axis\_cd.mib* file is used by SNMP and the *stat.txt* file contains CD-ROM server statistics. The *config.ini* file is used to set various CD-ROM server parameters. See section 5.





## Accessing CD-ROMs

The CD-ROM server is integrated into your network operating system just like any other file server and you use the same commands to access it. To be able to access the CD-ROMs from your Windows, DOS or UNIX applications, you need to make them available to your system, that is to “mount” the CD-ROM server. On PC systems, this is typically done by mapping the server to a drive letter.

The Axis CD-ROM server offers several different possibilities to specify the access point:

- **root level access:** The top level of the CD-ROM server directory structure is used as access point. The user of the CD-ROM server can access all files on the server including the *config* and *volumes* folders. This is useful for system administrators, who have to be able to configure and monitor the CD-ROM server.
- **cd drive access:** The *cd* folder is used as the access point. The user can access all CD-ROMs inserted into the drives connected to the server. On PC systems this makes it possible to use only one drive letter to access all connected drives. This is the recommended access for normal users.
- **CD-ROM access:** A folder for an inserted CD-ROM is used as access point. Only the files on that CD-ROM can be accessed. On PC systems this makes it possible to map a drive letter to a single CD-ROM. This is useful or even necessary with some CD-ROM software which expects to find its data at root level.




### Novell NetWare (IPX)

When using NetWare, you access the CD-ROM server exactly as you would access any other NetWare file server. Below you will find examples on how to access the Axis CD-ROM server using Novell's clients for Windows 95, Windows for Workgroups and DOS.

- Note:** ☐ The examples below assume that you have not changed the NetWare server name in the *config.ini* file on the CD-ROM server. The default server name in the NetWare environment is `AXIS<nnnnnn>_NW`, where `<nnnnnn>` are the six last digits of the CD-ROM server serial number. If you have changed the server name, please use the new name where the examples refer to the default name.


#### Windows 95

1. **Start the Windows Explorer from the Start/Programs Menu.**
2. **Expand the Network Neighborhood icon. The available resources are displayed:**

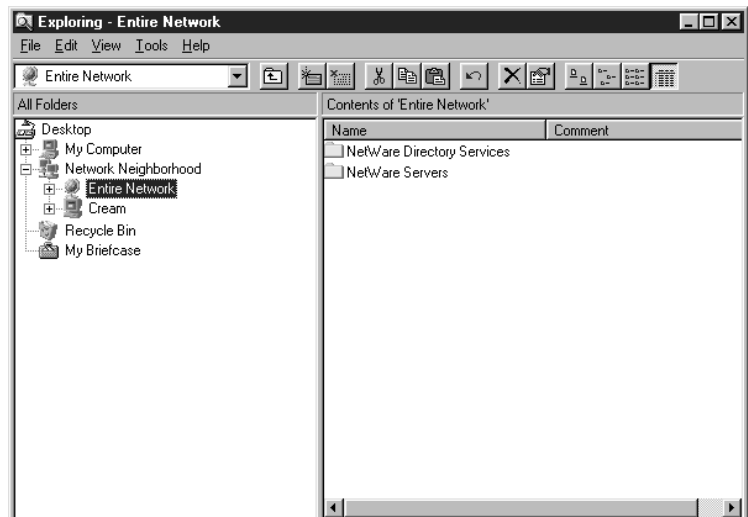




3. **Expand the Entire Network icon and then open the NetWare Servers folder.**

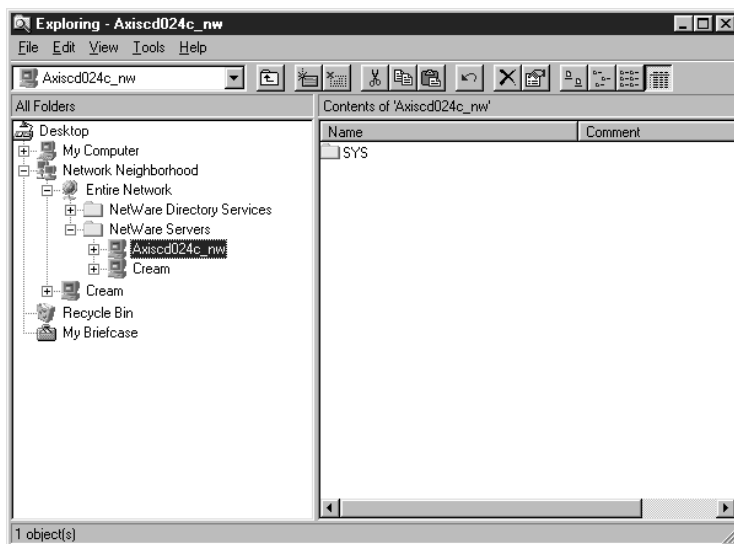

4. **Double-click the entry for your new CD-ROM server.** The default name is `AXIS<nnnnnn>_NW`, where `<nnnnnn>` are the six last digits of the CD-ROM server serial number.
5. **Enter your user name and password if you are not already logged in to your NetWare Network.** Before the CD-ROM server has been set up, all users have full access to it.



6. Once you are logged in to the CD-ROM server, expand the *SYS* and *Cd* folders to display all the resources:

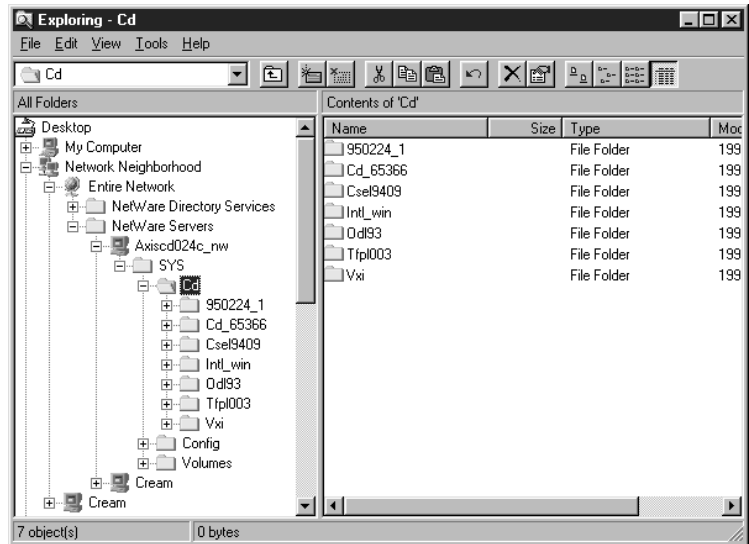

7. If you wish to map the CD-ROM server to a drive letter, select one of the CD-ROM server resources:

- For **root level access**, first left-click `AXIS<nnnnnn>_NW` in the left listing, then right-click `SYS` in the right listing.
- For **cd drive access**, first left-click `SYS` in the left listing, then right-click the *cd* folder in the right listing.
- For **CD-ROM access**, first left-click *cd* in the left listing, then right-click the CD-ROM you want to access in the right listing.

If you do not need to map the CD-ROM server to a drive letter you can of course continue to explore the server until you find the file you need.


8. From the pop-up menu, select **Map Network Drive**.
9. Select a drive letter for your CD-ROM server.



10. **Check Reconnect at Logon if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.**
11. **Click the OK button.** The CD-ROM server is ready for use.

## Windows for Workgroups

1. **Start the File Manager.**
2. **From the Disk menu, select Connect Network Drive...** The following screen is displayed:

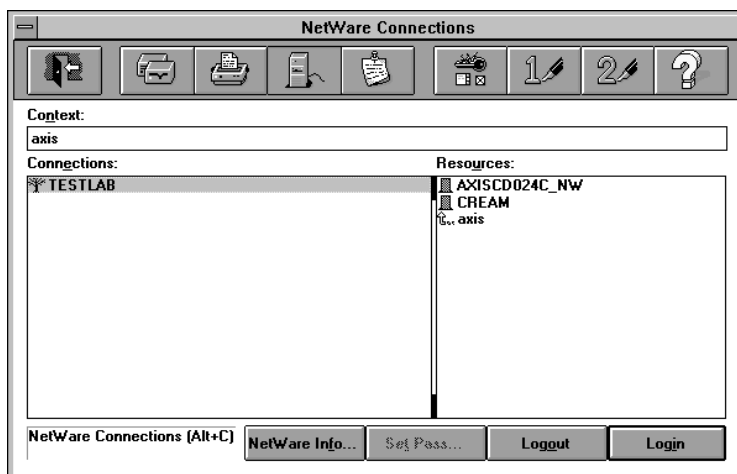


Make sure that you have selected the file server button. If you also have Microsoft Network installed, you may have to click the button labelled 'NetWare...' to display the screen.


3. **Select the entry for your new CD-ROM server.** The default name is AXIS<nnnnnn>\_NW, where <nnnnnn> are the last six digits of the CD-ROM server serial number. Please note that the 'Bindery' option in 'NetWare Settings' on your computer must be checked in order for the CD-ROM server to be listed.
4. **Click the Login button.**
5. **Enter your user name and password.** Before the CD-ROM server has been set up, all users have full access to it.




6. Once you are logged in to the CD-ROM server, click the **drive map button**. The following screen is displayed:

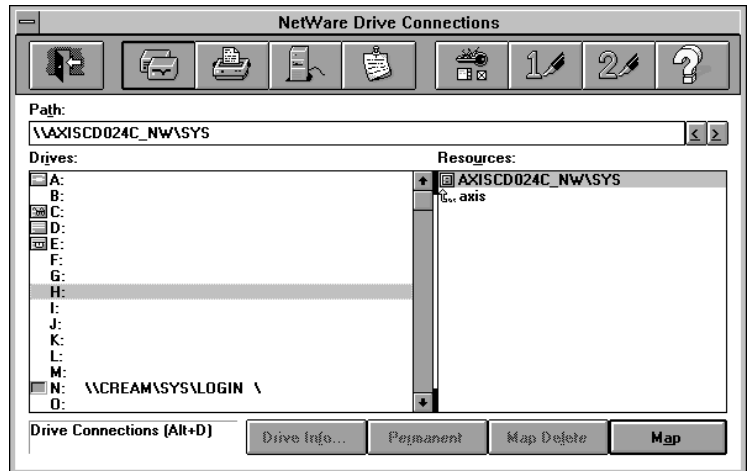

 7. Double click **AXIS<nnnnnn>\_NW\\SYS** and then the **CD** folder to display the following screen:

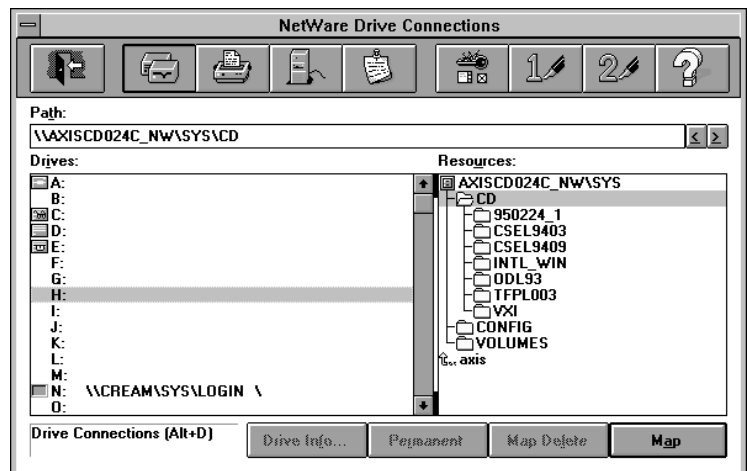



**8. Select a drive letter in the 'Drives' listing and then:**

- For **root level access**, select `AXIS<nnnnnn>_NW\SYS` in the 'Resources' listing.
- For **cd drive access**, select the *CD* folder in the 'Resources' listing.
- For **CD-ROM access**, select the CD-ROM you want to access in the 'Resources' listing.

**9. Click Map to map the CD-ROM server to the selected drive letter.**

**10. Click Permanent if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.**

**11. Click the Exit icon.** The CD-ROM server is ready for use.



**DOS** The CD-ROM server is mounted using the *map* command.

**1. Use the map command to mount the CD-ROM server.**

At the DOS prompt, type:

`map root <drive letter>:AXIS<nnnnnn>_NW/<path>`, where  
<nnnnnn> are the six last digits of your Axis CD-ROM server  
serial number and <path> is the path to any CD-ROM server  
folder or to any file on an inserted CD-ROM.

**Example (root level access):**

To access the root level of your CD-ROM server with serial  
number is 00408CCD000B under the drive letter E, type:

```
map root E:AXISCD000B_NW/SYS:
```

**Example (cd drive access):**

If your CD-ROM server serial number is 00408CCD000B, and  
you want to be able to access all the CD-ROMs under the drive  
letter F, type:

```
map root F:AXISCD000B_NW/SYS:/CD
```

**Example (CD-ROM access):**

If your CD-ROM server serial number is 00408CCD000B, and  
you want to map a CD-ROM named cd\_18881 to drive G, type:

```
map root G:AXISCD000B:NW/SYS:/CD/cd_18881
```

**2. To make the connections permanent, edit your *autoexec.bat* file to include your map commands.**





## Microsoft and IBM Network Operating Systems (SMB)

You access the Axis CD-ROM server just like any other workstation or file server. Below you will find examples on how to access the Axis CD-ROM server using clients for Windows 95, Windows for Workgroups, Windows NT, OS/2 and DOS.

The Axis CD-ROM server offers two different SMB protocols:

- SMB over NetBIOS/NetBEUI.
- SMB over NetBIOS/TCP/IP.


The CD-ROM server will automatically handle both protocols.

 
- Notes:**
- ❑ The examples below assume that you have not changed the SMB server name in the *config.ini* file on the CD-ROM server. The default server name in the SMB environment is *AXIS<nnnnnn>*, where *<nnnnnn>* are the six last digits of the CD-ROM server serial number. If you have changed the server name, please use the new name where the examples refer to the default name.
  - ❑ In the Microsoft Network environment network resources are accessed by specifying a server and a resource on that server using the *\\server\resource* syntax (UNC). The resource is not, as could be imagined, a file path. It is therefore impossible to replace the resource name with the path to a file or folder on your CD-ROM. Beside the CD-ROM folders in the *cd* folder, the Axis CD-ROM server makes the following resources available: *root*, *cd*, *config* and *volumes*.




### Windows 95

1. **Start the Windows Explorer from the Start/Programs Menu.**
2. **Expand the Network Neighborhood icon. The available resources are displayed:**

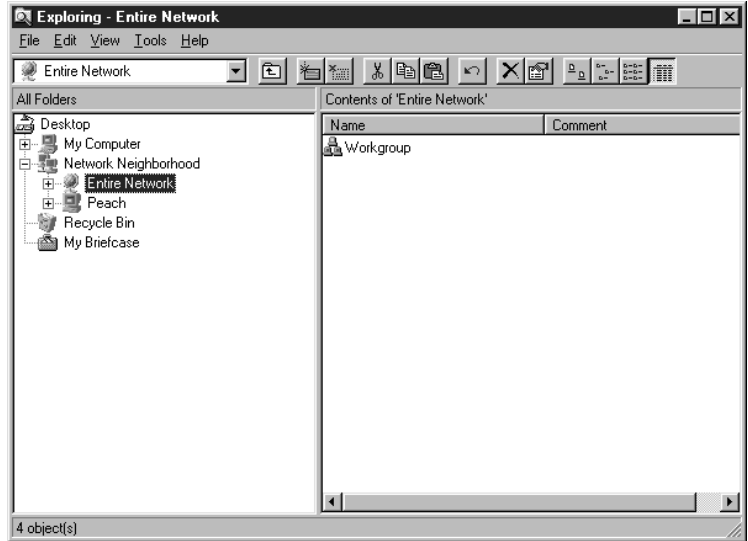




3. **Expand the Entire Network icon and then open the Workgroup folder.**

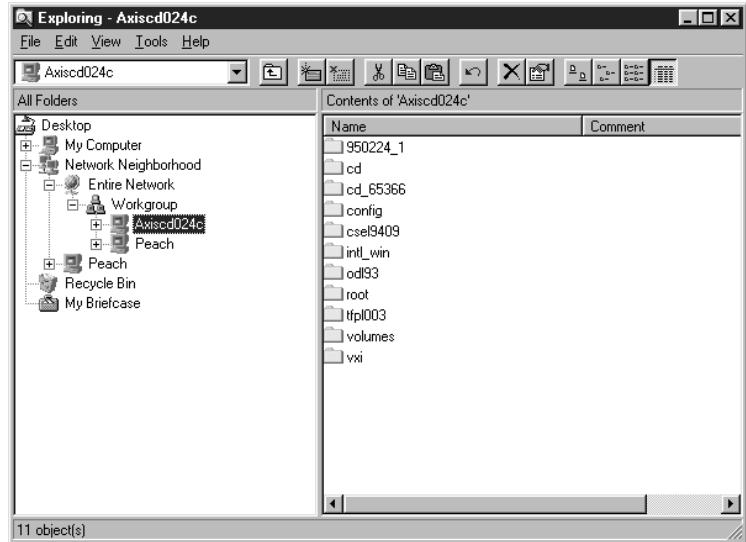

4. **Double-click the entry for your new CD-ROM server.** The default name is AXIS<nnnnnn>, where <nnnnnn> are the six last digits of the CD-ROM server serial number.

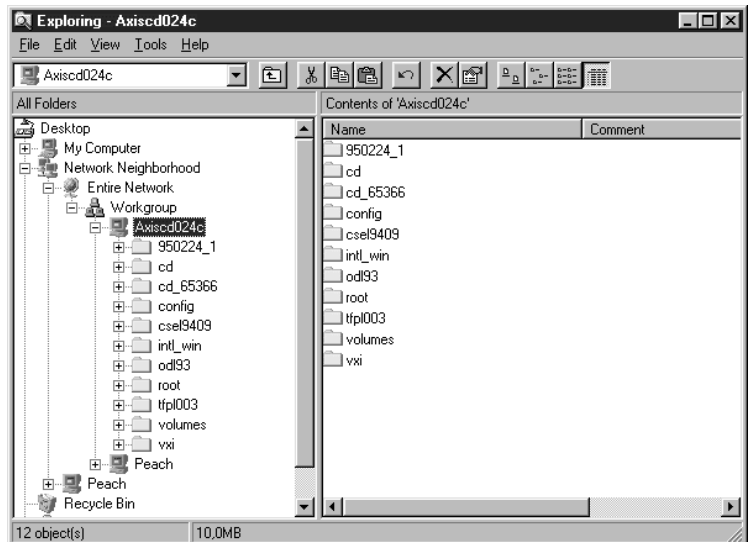



**5. Select one of the CD-ROM server resources:**

- For **root level access**, right-click **root** in the right listing.
- For **cd drive access**, right-click the **cd** folder in the right listing.
- For **CD-ROM access**, right-click the CD-ROM you want to access in the right listing.

**6. From the pop-up menu, select Map Network Drive.**

**7. Select a drive letter for your CD-ROM server.**

 
**8. Check Reconnect at Logon if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.**

**9. Click the OK button.** The CD-ROM server is ready for use.

**Note:** ☐ If you have removed the default workgroup named 'Workgroup' the Axis CD-ROM server will not be visible in the browser until an existing workgroup has been specified in the CD-ROM server configuration file. To connect to the CD-ROM server do the following:


- 1. Start the Windows Explorer from the Start menu.**
- 2. Select Map Network Drive from the Tools menu.**
- 3. Select a drive letter.**
- 4. In the path box, type \\AXIS<nnnnnn>\root, where <nnnnnn> are the six last digits of your CD-ROM server serial number.**
- 5. Check Reconnect at Logon if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.**
- 6. Click the OK button. The CD-ROM server is ready for use.**

You can edit your CD-ROM server configuration to make it appear in any existing workgroup. See section 5.



## Windows for Workgroups


1. **Start the File Manager.**
2. **From the Disk menu, select Connect Network Drive...**  
**Double-click Workgroup.** The following dialogue is displayed:

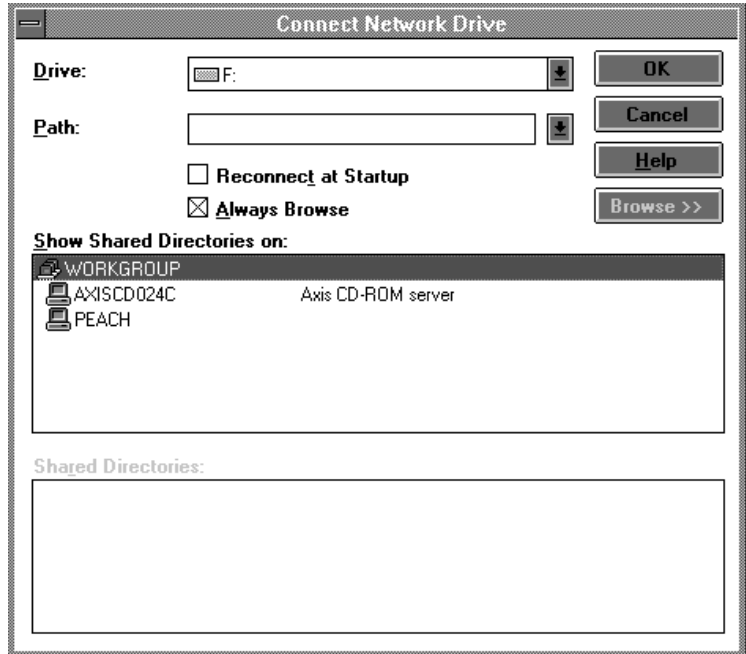

You may have to click the 'Browse>>' button to see the complete dialogue.



3. In the top listing, double-click the entry for your new CD-ROM server. The default name is `AXIS<nnnnnn>`, where `<nnnnnn>` are the six last digits of the CD-ROM server serial number.

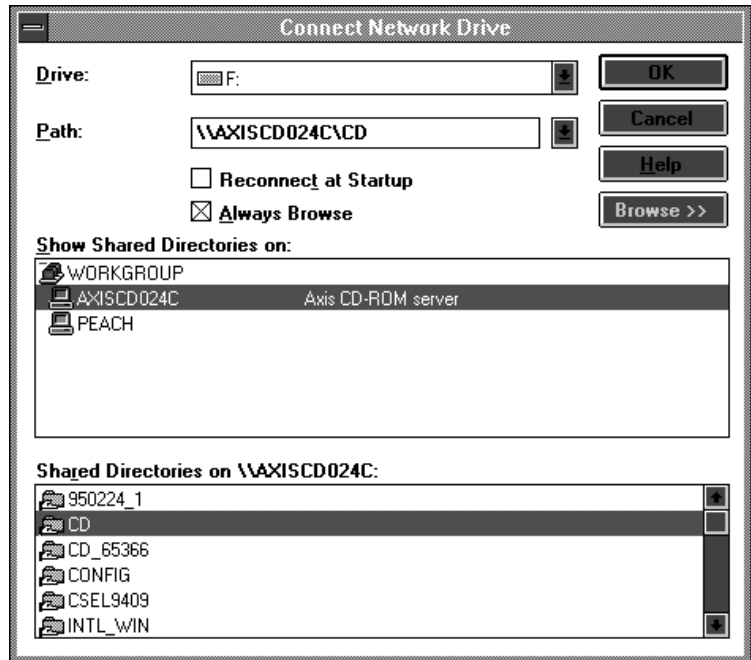

4. From the bottom listing, select one of the CD-ROM server resources:
  - For **root level access**, select the `root` folder.
  - For **cd drive access**, select the `CD` folder.
  - For **CD-ROM access**, select the CD-ROM you want to access.
5. Select a drive letter for your CD-ROM server.
6. Check **Reconnect at Startup** if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.
7. Click the **OK** button. The CD-ROM server is ready for use.



- Note:** ☐ If you have removed the default workgroup named 'Workgroup' the Axis CD-ROM server will not be visible in the browser until an existing workgroup has been specified in the CD-ROM server configuration file. To connect to the CD-ROM simply enter \\AXIS<nnnnnn>\root, where <nnnnnn> are the six last digits of the CD-ROM server serial number, in the 'Path' box and click OK.

---

#### Windows NT

1. **Start the File Manager.**
2. **From the Disk menu, select Connect Network Drive...**
3. **In the Path box, enter \\AXIS<nnnnnn>\<folder>, where <nnnnnn> are the six last digits of your Axis CD-ROM server serial number and <folder> is any CD-ROM server folder.**

**Example (root level access):**

```
\\AXISCD000B\root
```

**Example (cd drive access):**

```
\\AXISCD000B\cd
```

**Example (CD-ROM access):**

If your CD-ROM is named cd\_18881, enter:

```
\\AXISCD000B\cd_18881
```


4. **Select a drive letter for your CD-ROM server.**
5. **Check Reconnect at Startup if you wish to use the CD-ROM server under the same drive letter the next time you start your computer.**
6. **Click the OK button.** The CD-ROM server is ready for use.




### IBM Peer for OS/2

Make sure you have IBM Peer for OS/2 installed. If not, see note below.

1. **Double-click the OS/2 Peer icon.** The Peer window opens:

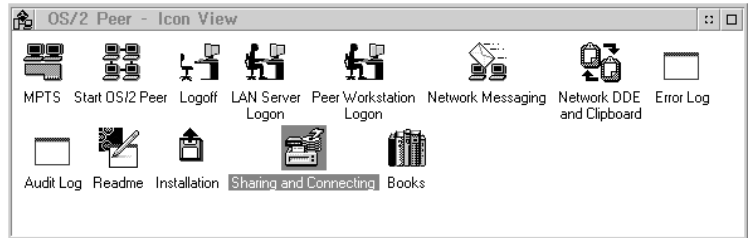

2. **Double-click the Sharing and Connecting icon to open the following window:**

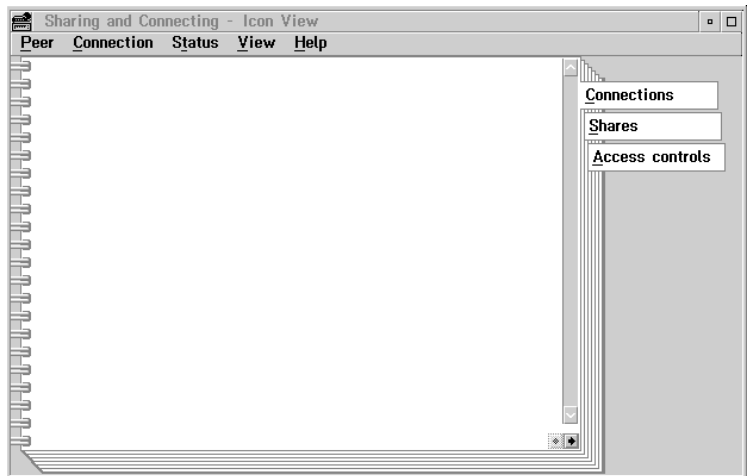


Any active connections you have will be listed in the window.





3. From the Connection menu, select Create. The following dialogue is shown:

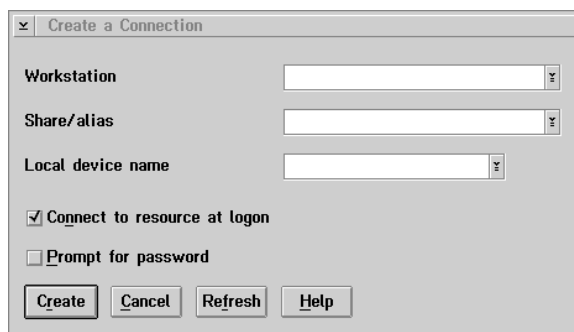

4. In the Workstation field, enter `AXIS<nnnnnn>`, where `<nnnnnn>` are the last six digits of your Axis CD-ROM server serial number.
5. In the Share/alias field enter the name of any CD-ROM server folder or inserted CD-ROM.
  - For **root level access**, type `root`.
  - For **cd drive access**, type `cd`.
  - For **CD-ROM access**, type the volume name of the CD-ROM, for example `cd_18881`.
6. In the Local device name field, select a drive letter for your CD-ROM server.
7. **Click Create.** The CD-ROM server is ready for use.

**Notes:** □ Please note that CD-ROM server folders will not be visible on the Desktop in OS/2 versions prior to OS/2 WARP Connect. If you wish to use an earlier version of OS/2, we recommend using third party NFS software to connect to the CD-ROM server.



- ❑ If you do not have Peer for OS/2, the CD-ROM server can be mapped to a drive letter using the *net use* command. Do as follows:
  - 1. Open an OS/2 window.**
  - 2. Use the net use command to mount the CD-ROM server.**

At the OS/2 prompt, type:

```
net use <drive letter>: \\AXIS<nnnnnn>\<folder>
```

where <nnnnnn> are the six last digits of your Axis CD-ROM server serial number and <folder> is any CD-ROM server folder.
  - 3. To make the connections permanent, create or edit your *startup.cmd* file to include your net use commands.**



**DOS** The CD-ROM server is mounted using the *net use* command.

**1. Use the net use command to mount the CD-ROM server.**

At the DOS prompt, type:

```
net use <drive letter>: \\AXIS<nnnnnn>\<folder>,
where <nnnnnn> are the six last digits of your Axis CD-ROM
server serial number and <folder> is any CD-ROM server
folder.
```

**Example (root level access):**

To access the root level of your CD-ROM server with serial number is 00408CCD000B under the drive letter E, type:

```
net use E: \\AXISCD000B\root
```

**Example (cd drive access):**

If your CD-ROM server serial number is 00408CCD000B, and you want to be able to access all the CD-ROMs under the drive letter F, type:

```
net use F: \\AXISCD000B\cd
```

**Example (CD-ROM access):**

If your CD-ROM server serial number is 00408CCD000B, and you want to map a CD-ROM named cd\_18881 to drive G, type:

```
net use G: \\AXISCD000B\cd_18881
```

**2. To make the connections permanent, edit your *autoexec.bat* file to include your net use commands.**



### UNIX (NFS)

#### Before you begin

---

You will need *root* privileges to mount the CD-ROM server.

On UNIX systems the CD-ROM server is accessed using NFS. To access the server, you will have to do the following:

#### 1. Create a directory for the CD-ROM server.

```
mkdir <directory>
```

##### Example:

```
mkdir /axis850
```

#### 2. Mount the CD-ROM server.

```
mount <host name>:/ <directory>
```

##### Example:

```
mount cdserv:/ /axis850
```

**Note:** The <host name> is the host name assigned to the CD-ROM server during TCP/IP configuration, see section 3.

#### NFS for PC or Apple Macintosh

---

The Axis CD-ROM server can also be accessed using third party NFS software for PC or Apple Macintosh computers. If you run a TCP/IP network this is an alternative to SMB. Please see the NFS software documentation for instructions on how to mount the CD-ROM server.



## Section 5 Access Control and Set-up

This sections shows you how to make the most of your Axis CD-ROM server. You will find out how to:

- Apply access restrictions to the server and individual CD-ROMs.
- Set-up the CD-ROM server.

### CD-ROM Access Control

The Axis CD-ROM server offers the possibility to restrict user access to individual CD-ROMs as well as to the CD-ROM server configuration files. It is also possible to limit the number of users simultaneously accessing any CD-ROM in order to comply with licensing agreements.

As mentioned in “The CD-ROM server File System” on page 23, the *volumes* folder contain text files that control access to the CD-ROMs. Up to 25 CD-ROM access control files can be kept in the *volumes* folder at any time. When the limit is reached, the oldest file is discarded when a new CD-ROM is inserted.

Beside a file for each CD-ROM that has been inserted into a connected drive, the following files control access to the CD-ROM server itself:

- *root.txt* – access to the root level
- *cd.txt* – access to the *cd* folder
- *config.txt* – access to the *config* folder
- *volumes.txt* – access to the *volumes* folder

In addition, the volumes folder contains the *defaults.txt* file, which is used as a template for the access control file of a newly inserted CD-ROM. By editing this file, you may define default access restrictions for new CD-ROMs.



### Example:

The format of the access control file is shown below:

```
Name           = cd_18881
Alias           = cd_18881
UserLimit       = 0
SessionTimeout  = 0
NetWareUser/Group = *
NFSIPAddress    = *
NFSGroup        = *
NFSUser         = *
SMBPassword     = *

[END]
```

- Name is the volume name of the CD-ROM disk or *cd\_nnnnn*, where *nnnnn* is an unique five digit number if the disk has no volume name.
- Alias is the name displayed in the *cd* folder. By editing this entry, you can select a name that makes sense to the users of the CD-ROM. The name must be a unique and valid volume name.
- UserLimit is the maximum number of simultaneous users of the CD-ROM. When set to 0 any number of users may access the disk.
- SessionTimeout specifies how many seconds a user is considered to be active after the last access to the disk. After the time has expired, another user may access the disk and perhaps lock out the first user, depending on the User Limit setting.

Below, you will see how to set up access restrictions in the supported network environments.

---

### NetWare

To restrict access to the CD-ROM server in the NetWare environment you must first specify an Authentication Server in the CD-ROM server *config.ini* file. See “CD-ROM Server Set-up” on page 51.

Before the Authentication server has been selected, you can choose between granting all users guest access or to limit access to the user ‘supervisor’ using the password specified in the *config.ini* file.



The access is controlled by creating or editing NetWareUser/Group entries in the access control files in the volumes folder on the CD-ROM server. The following values can be used:

NetWareUser/Group	Description
*	Any user has access
<any user or group>	Users with this name or in this group are granted access
<entry not present>	No access from NetWare

You may add as many NetWareUser/Group parameters as you require. See also the examples below. To set up the parameters, do as follows:

- 1. Locate the proper file in the volumes folder.**
- 2. Open the file using the Windows Notepad Editor or any other editor.**
- 3. Edit or add NetWareUser/Group entries as required.**
- 4. Save the file.**

#### **Example 1:**

Grant access to all users in the group 'salesdep' and to the user 'Ray' who is not a member of 'salesdep':

```
NetWareUser/Group = salesdep
NetWareUser/Group = Ray
```

#### **Example 2:**

Grant all NetWare users access:

```
NetWareUser/Group = *
```

**Note:** ☐ You can always access the CD-ROM server using the user name 'supervisor' and the password specified by the parameter 'SupervisorPassword' in the *config.ini* file. By default the password is 'pass'.



### Microsoft and IBM Network Operating Systems

---

The Axis CD-ROM server implements share-level access control. This means that a password can be assigned to any CD-ROM server folder or any CD-ROM inserted in a connected drive. The user will automatically be prompted for the password when trying to access the shared folder. Access will then be granted to the folder and all subfolders.

The password is set using the SMBPassword entry in the access control files in the volumes folder. The following values are valid:

SMBPassword	Description
*	No password required to access the folder using Microsoft Network
<password>	Any valid password (Max. 15 characters)
<entry not present>	No access using Microsoft Network

To assign a password to a CD-ROM server folder or CD-ROM or to change an old password, do as follows:

- 1. Locate the proper file in the volumes folder.**
- 2. Open the file using the Windows Notepad Editor or any other editor.**
- 3. Edit the SMBPassword entry to set the password.**
- 4. Save the file.**

#### **Example 1:**

```
SMBPassword = PASS
```

#### **Example 2:**

Grant all Microsoft Networks users access:

```
SMBPassword = *
```





## UNIX (NFS)

When accessing the CD-ROM server using NFS, you may restrict the access to users with a certain IP Address, Group ID (GID) or User ID (UID).

The access is controlled by creating or editing NFSIPAddress, NFSGroup and NFSUser entries in the access control files in the volumes folder on the CD-ROM server. The following values can be used:

NFSIPAddress	Description
*	Users with any IP address is granted access
<any IP address>	Only users with the specified IP address have access
<entry not present>	IP address is not used to grant access

NFSGroup	Description
*	Users with any GID may access the folder or CD-ROM
<Group ID>	Only users with the specified GID have access
<entry not present>	GID is not used to grant access

NFSUser	Description
*	Users with any UID may access the folder or CD-ROM
<User ID>	Only users with the specified UID have access
<entry not present>	UID is not used to grant access

Please note that there is an 'or' relation between the NFS access control parameters. A user fulfilling any of the NFS access criteria you have specified will be granted access. This means that if you set any of the parameters to '\*', all users will have access regardless of the settings of the other parameters.

You may add as many NFSIPAddress, NFSGroup and NFSUser parameters as you require. See also the examples below. To set up the parameters, do as follows:

- 1. Locate the proper file in the volumes folder.**
- 2. Open the file using your favourite editor.**
- 3. Edit, add or remove NFSIPAddress, NFSGroup and NFSUser entries as required.**



### 4. Save the file.

#### **Example 1:**

Give access to users with UID 100 and 101 and to all users with GID 4:

```
NFSUser = 100  
NFSUser = 101  
NFSGroup = 4
```

#### **Example 2:**

Give users with IP address 192.36.253.155 and 192.36.253.156 access:

```
NFSIPAddress = 192.36.253.155  
NFSIPAddress = 192.36.253.156
```



## CD-ROM Server Set-up

Various aspects of CD-ROM server operation can be customized using the *config.ini* file in the *config* folder. By editing this file you can for example set up the SMB server name, switch off SCSI termination, activate or deactivate the NetWare, SMB over NetBIOS/NetBEUI, SMB over NetBIOS/TCP/IP and NFS protocols, set up Internet and SNMP parameters or set the current date and time.

A typical *config.ini* file for an Ethernet CD-ROM server is shown in the example below. The config file for a Token Ring CD-ROM server also includes the server parameter SourceRouting.

### Example:

```
; Axis 850/851 CD-ROM Server Parameter List, version V2.10.0 May 1996

[Server]
HardwareAddress      = 00:40:8c:cd:0d:e8      ; can't be changed
Date                 = 95-01-01              ; yy-mm-dd, append '!' to set
Time                 = 18:07:14              ; hh:mm:ss, append '!' to set
FactoryDefaults      = no                   ; yes/no

[SCSI]
SCSITermination      = on                   ; on/off

[IP]
InternetAddress       = 192.36.253.80
DefaultRouter         = 0.0.0.0
NetMask               = 0.0.0.0
BOOTPEnable           = yes                 ; yes/no
RARPEnable            = yes                 ; yes/no

[SMB]
EnableNetBIOS/NetBEUI = yes                 ; yes/no
EnableNetBIOS/IP      = yes                 ; yes/no
Domain/GroupName      = WORKGROUP
ServerName             = AXISCD0DE8
SMBFrameType          = auto                ; auto/802_2/dix

[NFS]
NFSEnable             = yes                 ; yes/no
```

Continues on next page



Continued from previous page

```
[FTP]
FTPPassword          = pass

[SNMP]
GetCommunityName     = public
SetCommunityName     = pass
TrapDestination      = 0.0.0.0           ; Internet address
TrapCommunityName    = public
SystemContact        =
SystemName           =
SystemLocation       =
AuthenticationTrap    = disabled         ; disabled/enabled

[NetWare]
NWEnable             = yes               ; yes/no
Frame_802.2          = on                ; on/off
Frame_802.3          = on                ; on/off
Frame_EthernetII     = on                ; on/off
Frame_SNAP           = on                ; on/off
ServerName           = AXISCD0DE8_NW
InternalNetAddress   = 8C-CD-0D-E8
BurstMode            = on                : on/off
SupervisorPassword   = pass
AuthenticationServer  =                  ; name of authentication server

[END]
```

See the examples on the following pages for instructions how to edit the *config.ini* file. A brief description of the parameters can be found in Appendix B, 'The Config File'.

**Note:** ☐ Do not remove the [END] marker from the file.



### Turning off SCSI termination

The *config.ini* file has to be edited to set the SCSI parameter *SCSITermination* to off.

1. **In Windows, double-click the *config.ini* file to edit it using the notepad editor. In UNIX, use your favourite editor.**
2. **Locate the line *SCSITermination* and change the parameter value to off.** See the example below:

#### Example:

```
...  
[SCSI]  
SCSITermination    = off                ; on/off  
...
```

3. **Save the file.**
4. **To activate the new settings, power the Axis CD-ROM server off and then on again.** The indicators will flash during power-on and self-test. When the STATUS indicator stops flashing and remains unlit, the new setting is ready for use.

### Changing the SMB server name

The *config.ini* file has to be edited to set the SMB parameter *ServerName* to the desired name.

1. **In Windows, double-click the *config.ini* file to edit it using the notepad editor. In UNIX, use your favourite editor.**
2. **Locate the line *ServerName* and change the parameter value.** See the example below:

#### Example:

```
...  
[SMB]  
ServerName        = CDSERV  
...
```

3. **Save the file.**



- 4. To activate the new settings, power the Axis CD-ROM server off and then on again.** The indicators will flash during power-on and self-test. When the STATUS indicator stops flashing and remains unlit, the new setting is ready for use.

After changing the server name, you will have to use the new name to access the server from all systems using SMB.



# Appendix A    Trouble-shooting

## The Front Panel Indicators

The front panel indicators show the status of the CD-ROM server. The indicators have the following functions:

- **Status** – Flashes during start-up. When the CD-ROM server is ready for use, this light goes out.
- **CD** – Lights when a readable CD-ROM is inserted into any connected drive.
- **Network** – indicates network traffic.
- **Power** – indicates that power is connected to the CD-ROM server.

Status indicator  
remains lit

If the status indicator remains lit after start-up, this may indicate an error. Most likely there is a problem with the SCSI bus or any of the connected CD-ROM drives. Make sure all connected drives have unique SCSI addresses and that only the last drive in the SCSI chain is terminated. See also “SCSI Devices and Termination” on page 12.

CD indicator off

If the CD indicator remains off when inserting a CD-ROM into a connected drive, please check that the CD-ROM is in a supported format (High Sierra or ISO 9660). Also check the SCSI-bus. See “SCSI Devices and Termination” on page 12.

Network indicator off

The network indicator flashes when there is network traffic to the CD-ROM server. If it remains off and you know there is network traffic, check the network connection.



## **Errors When Accessing the CD-ROM Server**

If you get error messages when trying to access the CD-ROM server or any inserted CD-ROM, please make sure that you have assigned a unique Internet Address to the CD-ROM server. See also “UNIX Systems” on page 17.

You should also check the SCSI chain and ensure that all external CD-ROM drives are switched on and that only the last unit is terminated. Make sure that the external drives are switched on before the Axis CD-ROM server. If you are using an Axis 851 or Axis 951 CD-ROM Server with external CD-ROM drives, check that the internal termination is off. See also “SCSI Devices and Termination” on page 12.

Please note that Microsoft Windows Network (NetBEUI) must be enabled to access the CD-ROM server using SMB.

## **CD-ROM Software Will Not Run**

If you have successfully inserted a CD-ROM, but the software on it refuses to run or produces error messages, the software may expect the CD-ROM data to be at root level. In the Microsoft and IBM network operating system environments, you will then have to assign a drive letter to that particular disk. See “Accessing CD-ROMs” on page 25.

Please note that some CD-ROM software, for example the single user version of “Computer Select”, will not run on a CD-ROM server.





## Restoring Factory Default Settings

If you have disabled all network protocols, you may have to restore the CD-ROM server factory default settings to be able to communicate with the server. This is most easily done using FTP on a TCP/IP network:

Follow the steps below to restore the default settings:

- 1. Log in to the Axis CD-ROM server with the command `ftp <host name>` where `<host name>` is the name assigned in your system host table.**
- 2. You will be prompted for user id and password.** Use the user id `root`, which has the default password `pass` (`root` is the user id with the highest priority).
- 3. Issue the command `get defaults` to restore the default settings. The unit will then automatically restart.**
- 4. Log out using the command `quit`, `bye` or `exit` depending on your FTP version.**

If you do not have access to a TCP/IP network with FTP, your dealer can help you restore the factory default settings.



This page is intentionally blank

 
## Appendix B The Config File

Parameter name	Value	Description
[Server]		
HardwareAddress	= 00:40:8c:cd:0d:e8	The CD-ROM server hardware address
Date	= 95-01-01	Current date
Time	= 18:07:14	Current time
FactoryDefaults	= no	Set this parameter to yes to reset to factory default settings
[SCSI]		
SCSITermination	= on	Switches internal SCSI termination on or off
[IP]		
InternetAddress	= 192.36.253.80	The CD-ROM server IP address
DefaultRouter	= 0.0.0.0	Default router
NetMask	= 0.0.0.0	Net Mask
BOOTPEnable	= yes	Enable or disable bootp IP address setup
RARPEnable	= yes	Enable or disable rarp IP address setup
[SMB]		
EnableNetBIOS/NetBEUI	= yes	Enable or disable SMB over NetBIOS/NetBEUI
EnableNetBIOS/IP	= yes	Enable or disable SMB over NetBIOS/TCP/IP
Domain/GroupName	= WORKGROUP	The name of the CD-ROM server workgroup
ServerName	= AXISCD0DE8	The server name in the Microsoft Network environment
SMBFrameType	= auto	Select Frame Type to be used by SMB
[NFS]		
NFSEnable	= yes	Enable or disable NFS
[FTP]		
FTPPassword	= pass	The password used when using ftp to access the server
[SNMP]		
GetCommunityName	= public	Internet address
SetCommunityName	= pass	
TrapDestination	= 0.0.0.0	
TrapCommunityName	= public	
SystemContact	=	Enable or disable Authentication Trap
SystemName	=	
SystemLocation	=	
AuthenticationTrap	= disabled	



## Appendix B: The Config File

Parameter name	Value	Description
[NetWare]		
NWEnable	= yes	Enable or disable NetWare support
Frame_802.2	= on	Enable or disable the 802.2 frame type
Frame_802.3	= on	Enable or disable the 802.3 frame type
Frame_EthernetII	= on	Enable or disable the Ethernet II frame type
Frame_SNAP	= on	Enable or disable the SNAP frame type
ServerName	= AXISCD000E_NW	NetWare server name
InternalNetAddress	= 8C-CD-00-0E	Internal net address - assigned by a NetWare file server.
BurstMode	= on	Burst mode enable
SupervisorPassword	= pass	Password used when accessing the server as 'supervisor'
AuthenticationServer	=	Name of a NetWare Authentication Server
[END]		



## Appendix C Updating the Software

### Software that can be Updated

- The AXIS CD-ROM server software held in *Flash Memory*

All software updates are free of charge.

### Checking if an update is available

Contact your dealer to check if there has been any new issues of the software. You should have your present version numbers ready to compare against the latest software issues from Axis.

Alternatively you may wish to check the Axis WWW Home Page at **<http://www.axis.se>** or **<http://www.axisinc.com/>**, where you can down-load the latest versions of the software. You can also get files and information through anonymous ftp: log in to **[ftp.axis.se](ftp://ftp.axis.se)** or **[ftp.axisinc.com](ftp://ftp.axisinc.com)** and go to the /pub/axis directory.

An easy way to reach the Axis Home Page is to use your web browser to open the *info.htm* file in the CD-ROM server root folder.


---

***Flash Memory*** The software that runs your Axis CD-ROM server is stored in Flash Memory. This is a memory chip that, like ordinary ROM memory, keeps its contents even when the power is turned off. What makes it unique is the possibility to erase its contents and write new data to it. This means that when software updates are available for your CD-ROM server, you can make use of them without having to replace any parts. The new software is simply loaded into the CD-ROM server using the network.



### Updating the Axis CD-ROM server Flash Memory

---

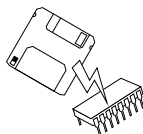

You can carry out an update to your Flash memory over the network using FTP on a TCP/IP network.

To upgrade over the network you will need the following:

- The file with the new print server software. The name of this file is on the form *product.version*, e.g. 850.210 for the software release 2.10 for the AXIS 850 CD-ROM server. Retrieve the updated file from Axis (<http://www.axis.se/>) or your local distributor.
- A computer on the network with TCP/IP and a FTP.
- The CD-ROM server must also be installed on the network with TCP/IP as described in the section 3, Network Configuration.

Follow the steps below to upgrade the print server software:

1. **Log in to the Axis CD-ROM server with the command** `ftp <host name>` **where** `<host name>` **is the name assigned in your system host table.**
2. **You will be prompted for user id and password.** Use the user id `root`, which has the default password `pass` (`root` is the user id with the highest priority).
3. **Issue the command** `binary` **to change to binary transfer mode.**
4. **Issue the command** `put <software name> flash` **where** `<software name>` **is the name of the new CD-ROM server software, e.g. 850.210.**
5. **Wait for the Flash load to finish. This normally takes 1 to 4 minutes. The unit will then automatically restart with the new print server software.**

#### Caution

- ☐ Be careful not to interrupt the file transfer. If the transfer is interrupted the CD-ROM server may have to be re-initialized by your dealer.
6. **Log out using the command** `quit`, `bye` **or** `exit` **depending on your FTP version.**

Instructions on how to carry out the update are also supplied with the software update.



## Appendix D Technical Specifications

### Supported systems

Novell NetWare	NetWare 3.11, 3.12 and 4.10.
Microsoft Windows	Windows for Workgroups, Windows 95, Windows NT.
Microsoft LAN Manager	LAN Manager 1.3 and above.
IBM LAN Server	LAN Server 1.3 and above.
UNIX:	Supports all UNIX dialects through NFS over UDP/IP on TCP/IP networks.

### Supported Protocols

Novell NetWare	IPX, RIP, SAP, NCP.
Microsoft Windows	SMB over NetBIOS/NetBEUI and SMB over NetBIOS/TCP/IP.
Microsoft LAN Manager	SMB over NetBIOS/NetBEUI and SMB over NetBIOS/TCP/IP.
IBM LAN Server	SMB over NetBIOS/NetBEUI and SMB over NetBIOS/TCP/IP.
UNIX	NFS, FTP, TCP, UDP, IP, RARP, BOOTP, SNMP.

### Network management

SNMP MIB-II and private enterprise MIB.

### Attachments

AXIS 850, AXIS 851	10baseT (twisted pair), AUI (10base2, 10base5, fibre via transceiver).
AXIS 950, AXIS 951	STP (Media Type 1/DB9), UTP (Media Type 3/RJ45).

### File systems

High Sierra (HSF), ISO 9660.

### CD-ROM drive connection

SCSI-2, 50 pin female micro-D connector for external drives.  
SCSI-2, 50 pin header and standard 4 pin power connector for internal drive.  
(Axis 851/951 only)

### Power supply

AXIS 850, AXIS 950	12V AC, 11VA, via external power unit.
AXIS 851, AXIS 951	12V DC, 30VA, via external power unit.

### Dimensions

AXIS 850, AXIS 950	Height: 1.3 in (3.2 cm), Width: 7.7 in (19.5 cm), Depth: 5.2 in (13.3 cm)
AXIS 851, AXIS 951	Height: 3.0 in (7.5 cm), Width: 7.7 in (19.5 cm), Depth: 9.0 in (23.0 cm)



## Appendix D: Technical Specifications

---

### Weight

AXIS 850, AXIS 950	1.8 lbs (0.8 kg)
AXIS 851, AXIS 951	3.9 lbs (1.3 kg), excluding CD-ROM drive.

### Environmental

Temperature: 40-105°F (5-40°C)  
Humidity: 20-80% RHG, non-condensing.

### Approvals

EMC	CE: EN 55022/1987, EN50082-1/1992. FCC Class A.
Safety	EN 60950, UL, CSA. Approved power supply for all countries.



All specifications are subject to change without prior notice.





## Appendix E    How To Contact Axis

---

### Technical Support

If you need technical support, please contact your dealer. If they can't help you, they will forward your request through the appropriate channels.

---

### Internet and World Wide Web

If you are connected to Internet, have a look at the Axis WWW Home Page at **<http://www.axis.se>** or **<http://www.axisinc.com/>**. Here you can find information about the company and our products. You can also down-load on-line manuals, tools such as the Acrobat Reader for different platforms, and the latest versions of the software utilities. You can also get files and information through anonymous ftp: log in to **[ftp.axis.se](ftp://ftp.axis.se)** or **[ftp.axisinc.com](ftp://ftp.axisinc.com)** and go to the /pub/axis directory, or enter **<ftp://ftp.axis.se/pub/axis>** or **<ftp://ftp.axisinc.com/pub/axis>** in your WWW browser.

---

### The Axis Bulletin Board System

Another way to access the Axis archive is the Axis BBS. You will need a high-speed modem, a VT100 or VT220 terminal emulator, and a Kermit or ZModem compatible software. Dial **+46 46 12 06 32** or **+46 46 211 94 53** and log in as **guest** (no password required).



### The Axis Offices

To contact an Axis office, choose the one nearest to your region:

Europe, Middle East,  
South America,  
Africa, Australia

**Axis Communications AB**

Scheelevägen 16  
S-223 70 Lund, Sweden  
Phone: +46 46 270 18 00  
Fax: +46 46 13 61 30  
Email: [info@axis.se](mailto:info@axis.se)

North & Central  
America

**Axis Communications Inc.**

4 Constitution Way, Suite G, Woburn, MA 01801-1030, USA  
Phone: 1-800-444-AXIS, (617) 938-1188  
Fax: (617) 938-6161  
Email: [info@axisinc.com](mailto:info@axisinc.com)

Japan

**Axis Communications K.K.**

8th Center Plaza 5F, 1-10-16 Nihombashi Horidome-cho,  
Chuo-ku, Tokyo 103, Japan  
Phone: +81 3 3663 8801  
Fax: +81 3 3663 8802  
Email: [info@axiscom.co.jp](mailto:info@axiscom.co.jp)

Hong Kong, Asia  
(except Japan &  
Middle East)

**Axis Communications Ltd.**

Room 602, Asian House, Hennessy Road,  
Wanchai, Hong Kong  
Phone: +852 2836 0813  
Fax: +852 2573 5935  
Email: [info@axis.com.hk](mailto:info@axis.com.hk)



# Index

## Numerics

10baseT 14

## A

access control  
    group ID 49  
    IP address 49  
    Microsoft and IBM Network operating systems 48  
    NetWare 46  
    session timeout 46  
    setting defaults 45  
    share-level 48  
    UNIX 49  
    user ID 49  
    user limit 46  
access control file 45, 46  
accessories 7  
AIX systems 19  
Alias 46  
Anonymous FTP 65  
Apple Macintosh 44  
arp 18  
AUI 14  
authentication server 46  
Axis BBS 65  
Axis Offices 66  
Axis WWW Home Page 61, 65  
axis\_cd.mib file 24

## B

bootp 18, 20

## C

cd drive access 25  
cd folder 23, 45  
CD indicator 55  
cd.txt file 45  
CD-ROM  
    access control 45  
    accessing 25  
    alias 46  
    compatible drives 15  
    drive speed 15  
    inserting 23  
    jukeboxes 15  
    map to drive letter 25  
    user limit 45, 46  
    volume name 46  
CD-ROM access 25  
config folder 24, 45, 51  
config.ini file 24, 51  
config.txt file 45

## D

default router address 21  
defaults.txt file 45  
DOS 32, 43

## E

ethernet address 19

## F

file system 23



Flash ROM 61

folder

- cd 23, 45
- config 24, 45, 51
- volumes 24, 45

ftp 61

## **G**

GID 49

## **H**

hardware type 20

host name 18

## **I**

IBM Peer for OS/2 40

indicator

- CD 55
- network 55
- power 55
- status 10, 11, 55

installation

- Apple Macintosh 44
- DOS 32, 43
- IBM Peer for OS/2 40
- UNIX 44
- Windows 95 26, 34
- Windows for Workgroups 29, 37
- Windows NT 39

Internet 65

internet address 18

Internet Axis Home Page 65

IPX 26

## **M**

media

- type 1 14
- type 3 14

mounting 25

## **N**

Name 46

net mask 21

NetWare 26

- authentication server 46
- server name 26
- supervisor 46, 47
- supervisor password 47

NetWareUser/Group 47

network indicator 55

Network Information Services 18

NFS 44, 49

NFSGroup 49

NFSIPAddress 49

NFSUser 49

NIS 18

node address 19

## **O**

OS/2 40

## **P**

power indicator 55

power supply 7, 63

## **R**

rarp 18, 20

readme.txt file 24

ring speed 14



root level access 25

root.txt file 45

## **S**

SCSI

- address 12

- cable 7

- termination 10, 12, 53

server name 53

- NetWare 26

- SMB 33, 51

SessionTimeout 46

share-level access control 48

SMB 33

- over NetBIOS/NetBEUI 51

- over NetBIOS/TCP/IP 51

- server name 33

SMB server name 33, 51

SMBPassword 48

SNMP 51

Software updates 61

source routing 22

SourceRouting 51

stat.txt file 24

status indicator 10, 11, 55

supervisor 46, 47

SupervisorPassword 47

## **T**

Technical Support 65

termination 10, 12

type 1 media 14

type 3 media 14

## **U**

UID 49

UNC 33

UNIX 44

updating your software 61

UserLimit 46

## **V**

volume name 23, 46

volumes folder 24, 45

volumes.txt file 45

## **W**

Windows 95 26, 34

Windows for Workgroups 29, 37

Windows NT 39

World Wide Web 61, 65

WWW 61, 65

## **Y**

Yellow Pages 18

YP 18